


Panel-H Wall

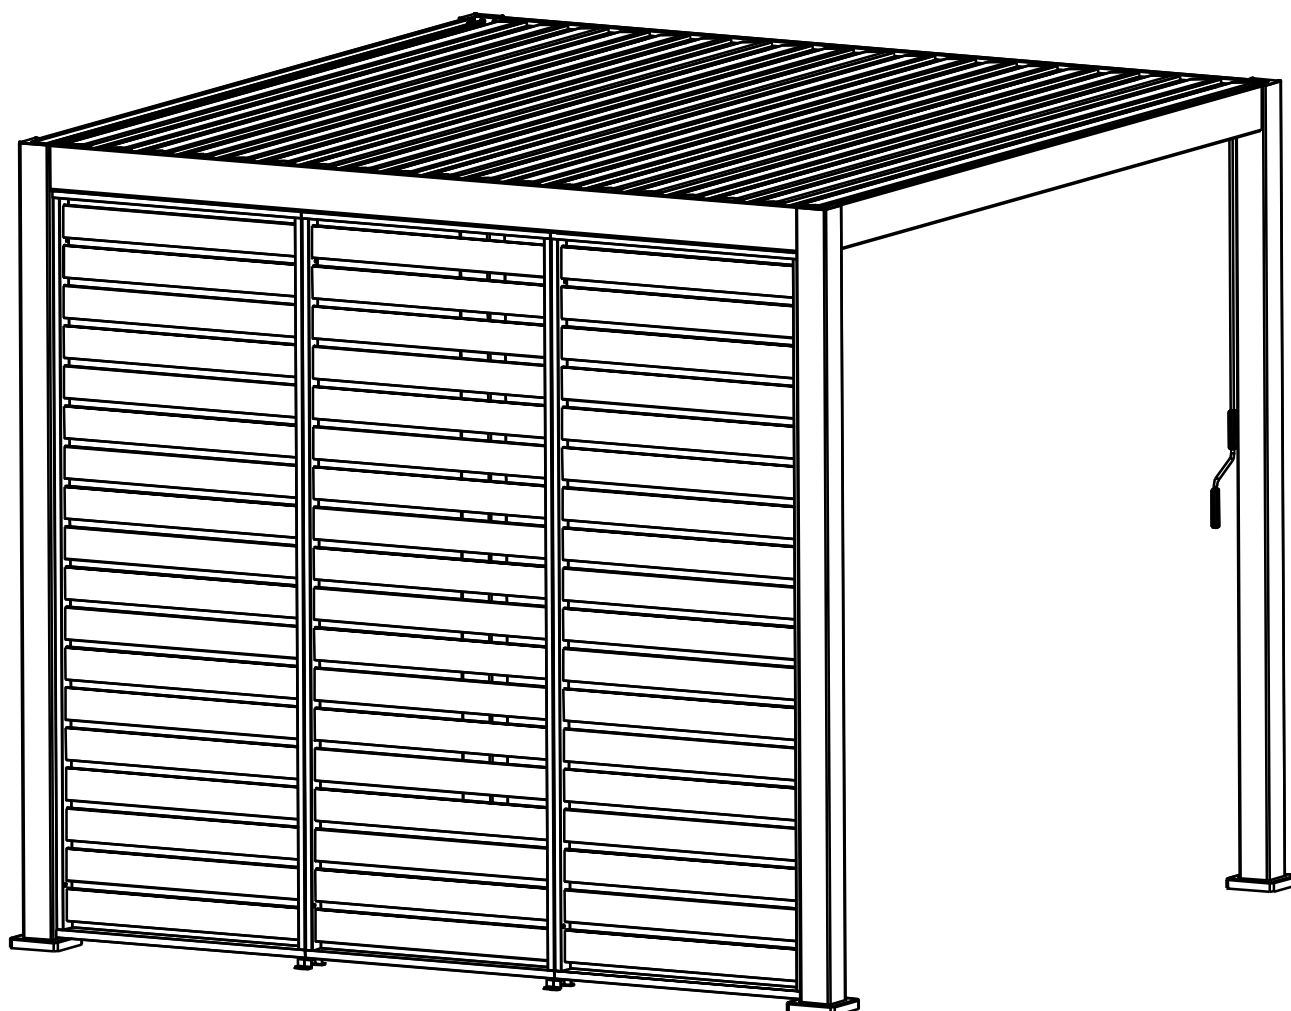

e-mail: info@zhengte.eu



The tools you need:




Glove




Knife




Safety hat




Electric screw driver

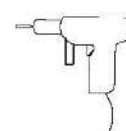


Percussion drill

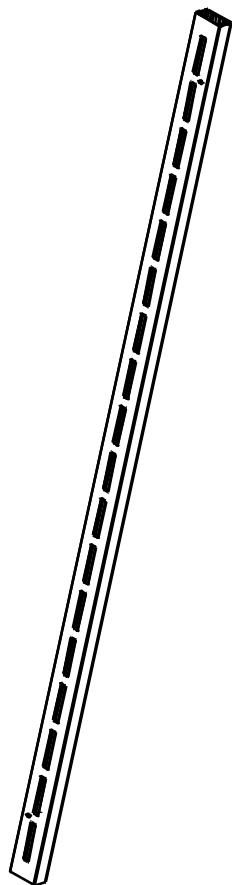


A x2

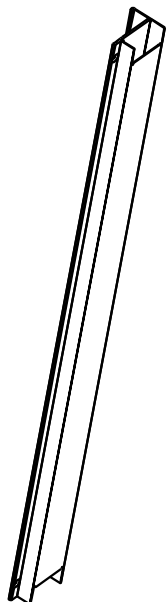

B x1

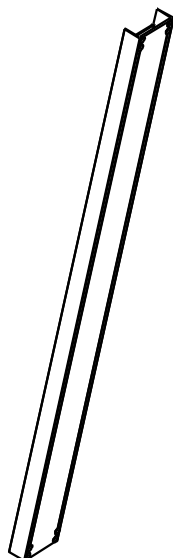

C x1

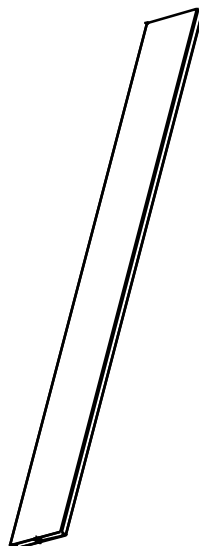

D x18




E x2



8x40

D x4

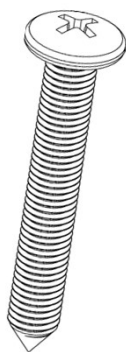

ST5.5x50

E x4



ST4.8x25

F x2



ST4.8x30

G x12+1



ST4.2x25

H x12+1



ST4.8x38

I x4




J x2





1



A x2



B x1



C x1





D x18



G x12




H x4

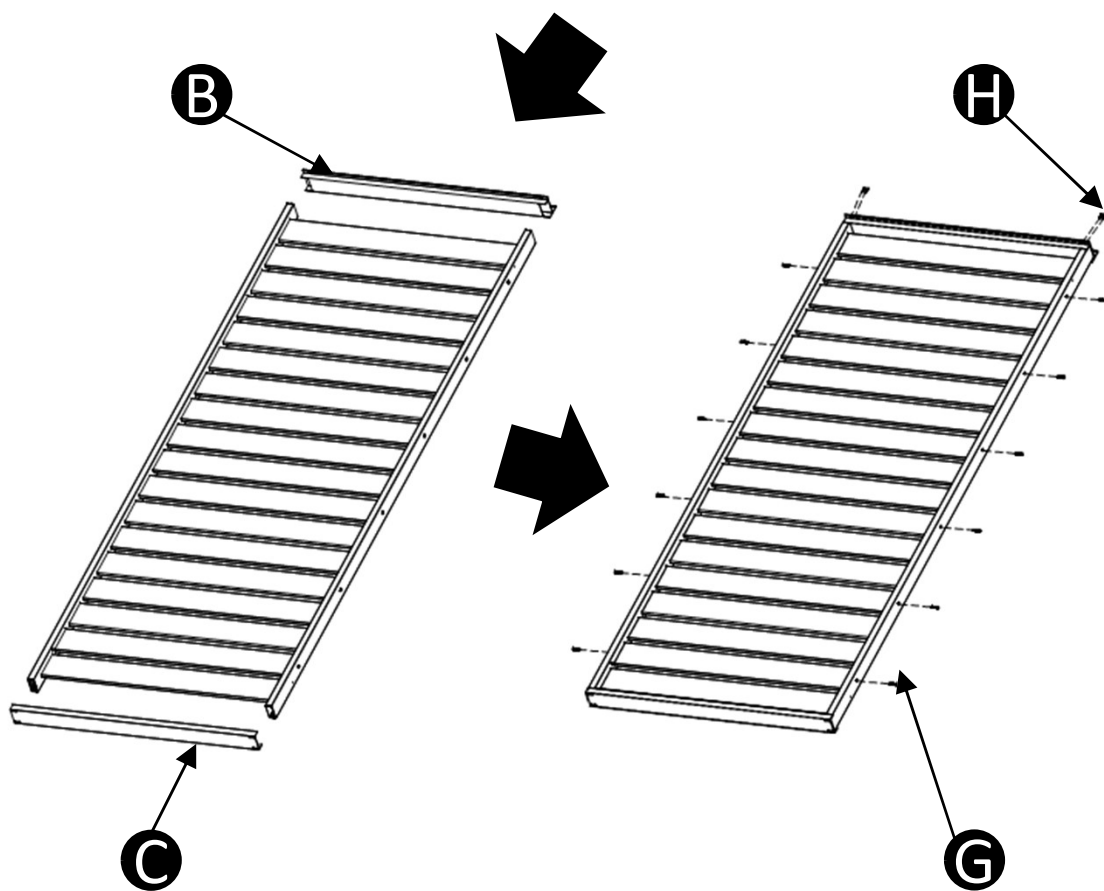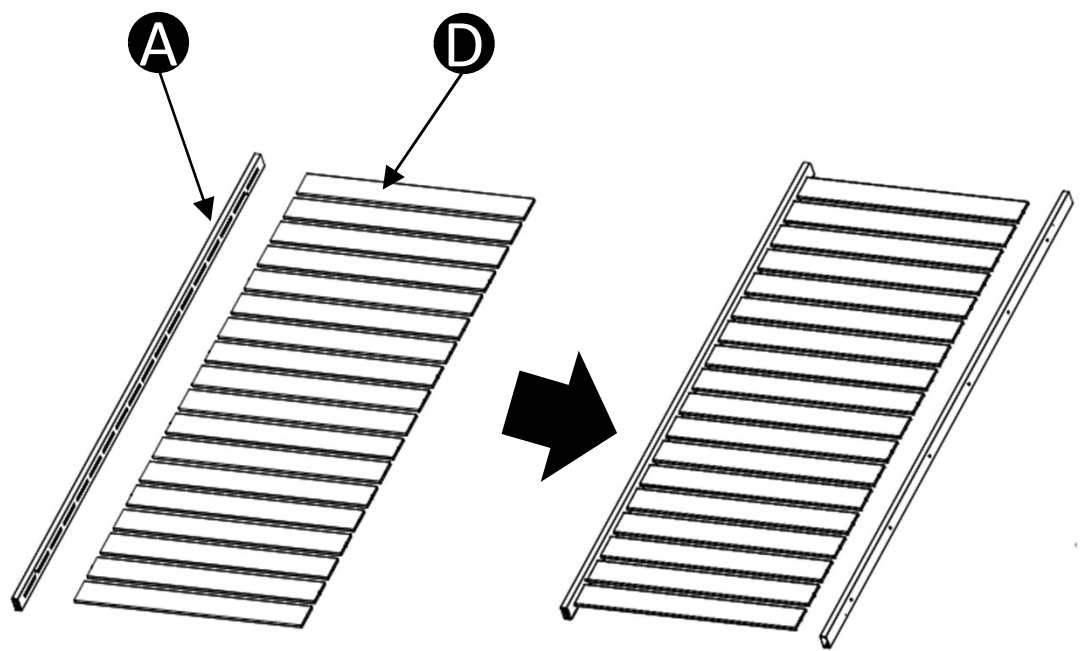




2



E x2



H x8

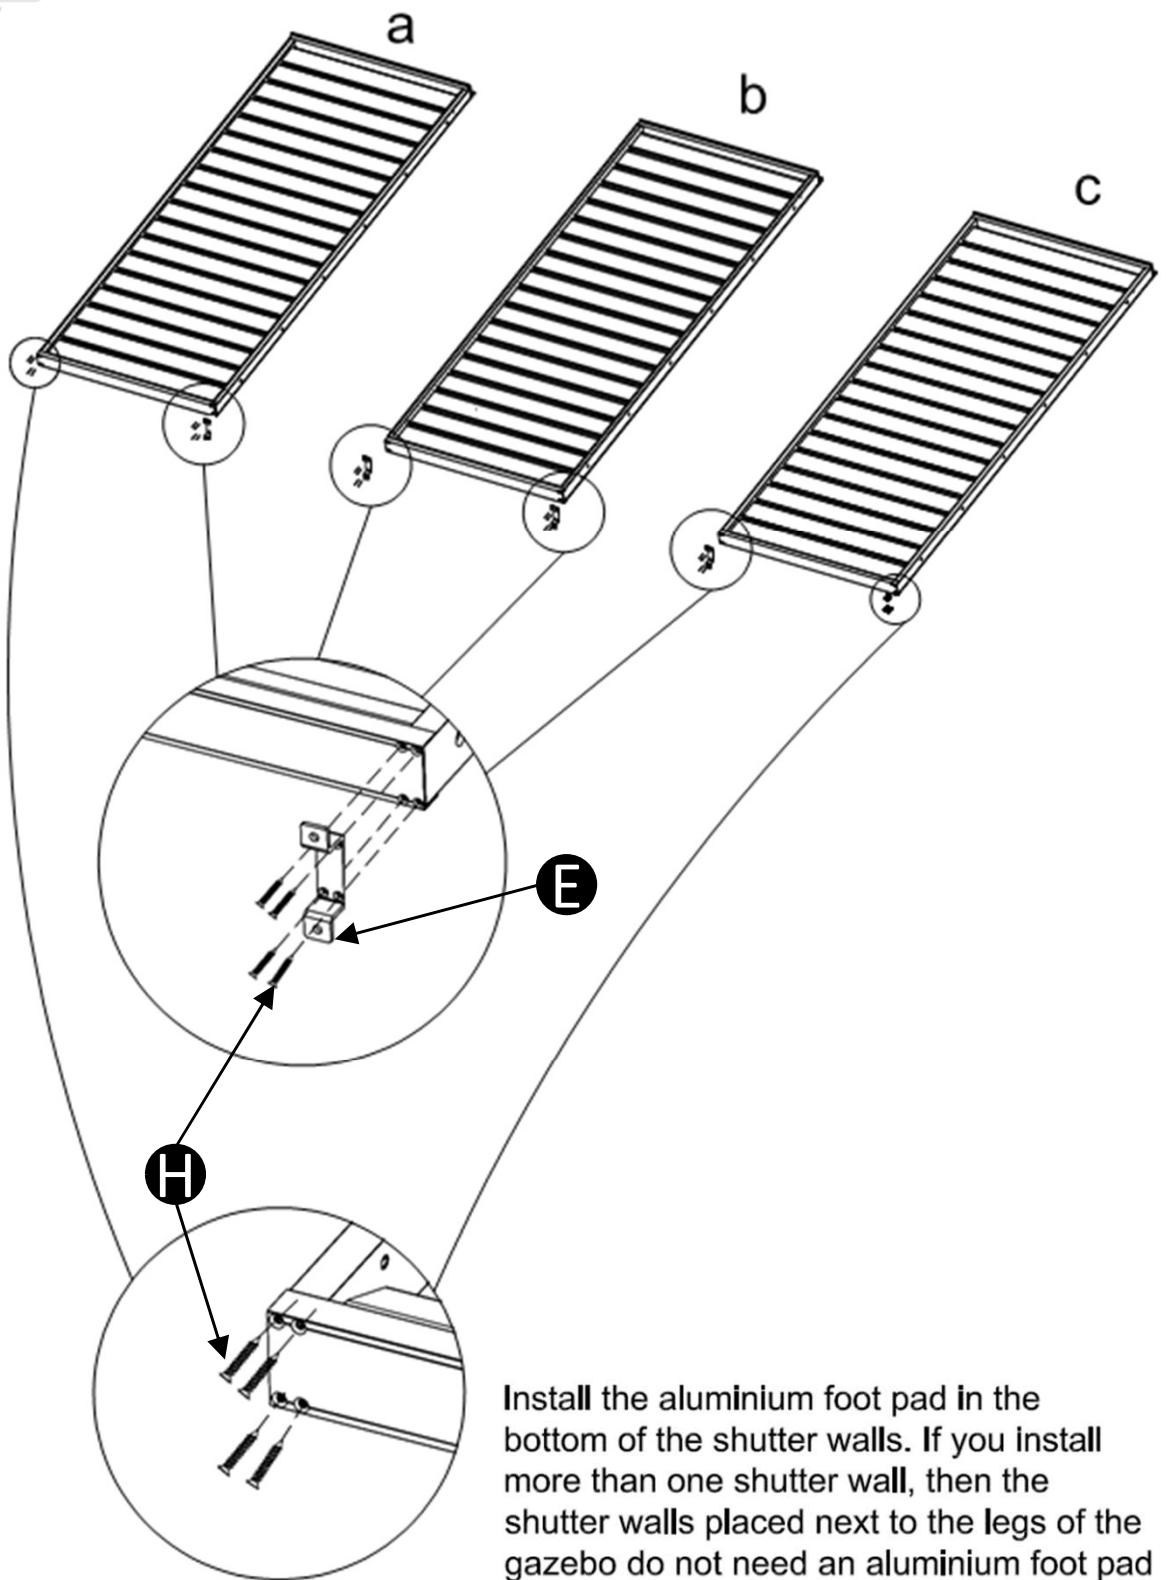


Install the aluminium foot pad in the bottom of the shutter walls. If you install more than one shutter wall, then the shutter walls placed next to the legs of the gazebo do not need an aluminium foot pad (part D).






3



D x4

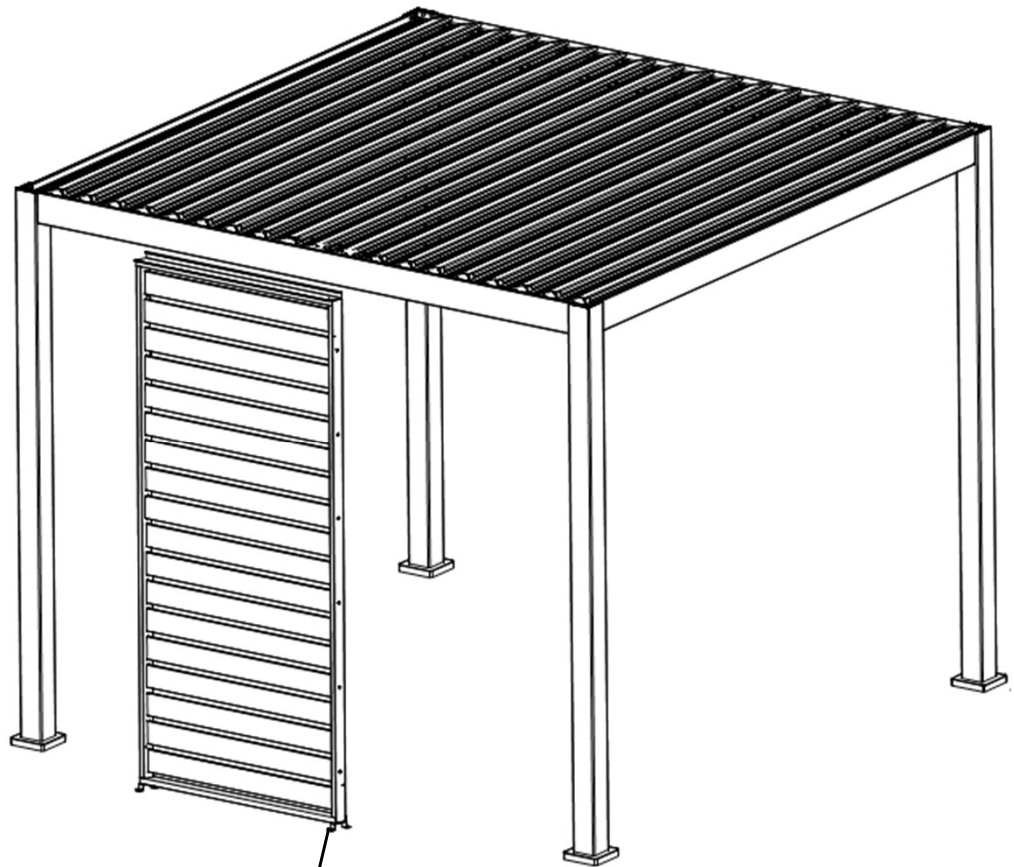

Draw lines, drill holes, tap in plastic expansion pipe.

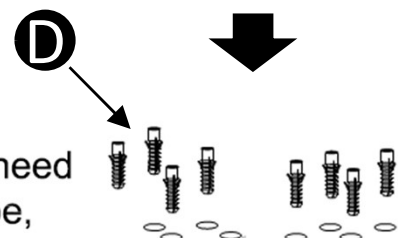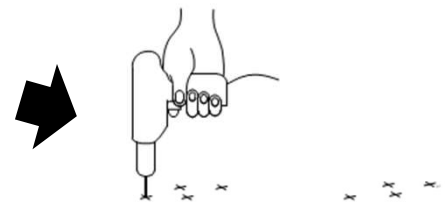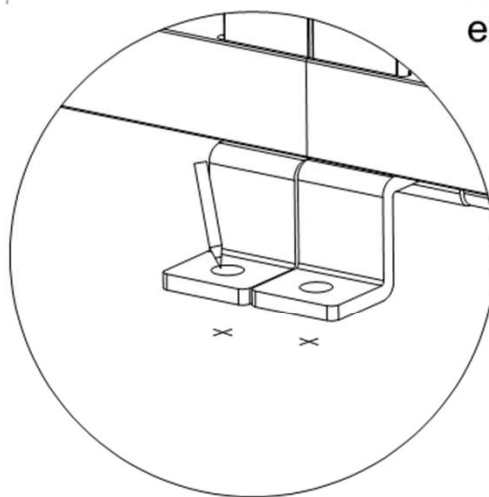


If the floor is a wood floor, you don't need to knock in the plastic expansion pipe, directly use E to knock in the floor.




4



F x2

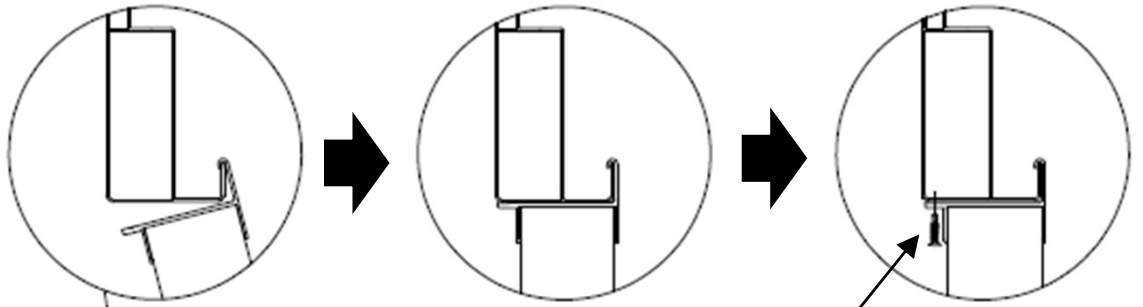


F

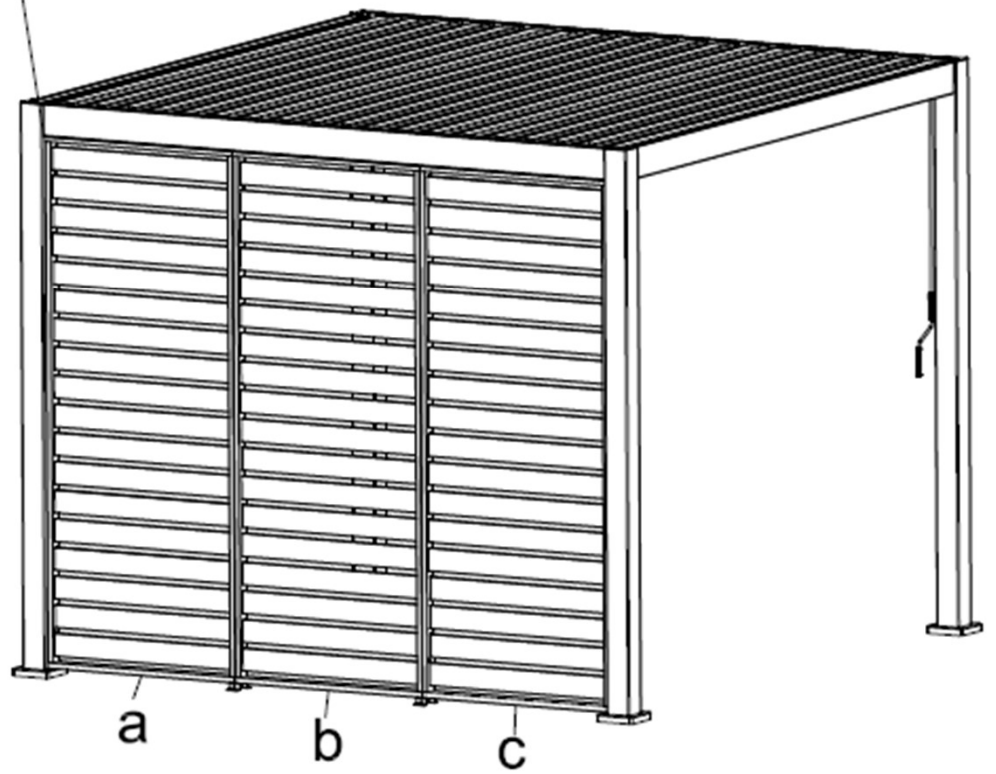






5

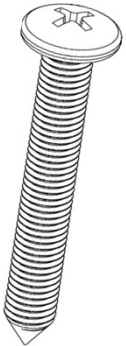


E x4




I x4

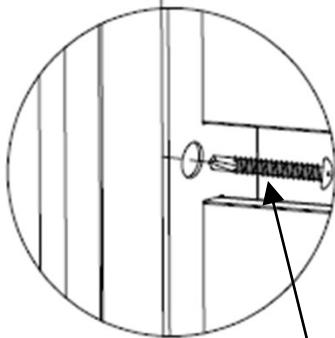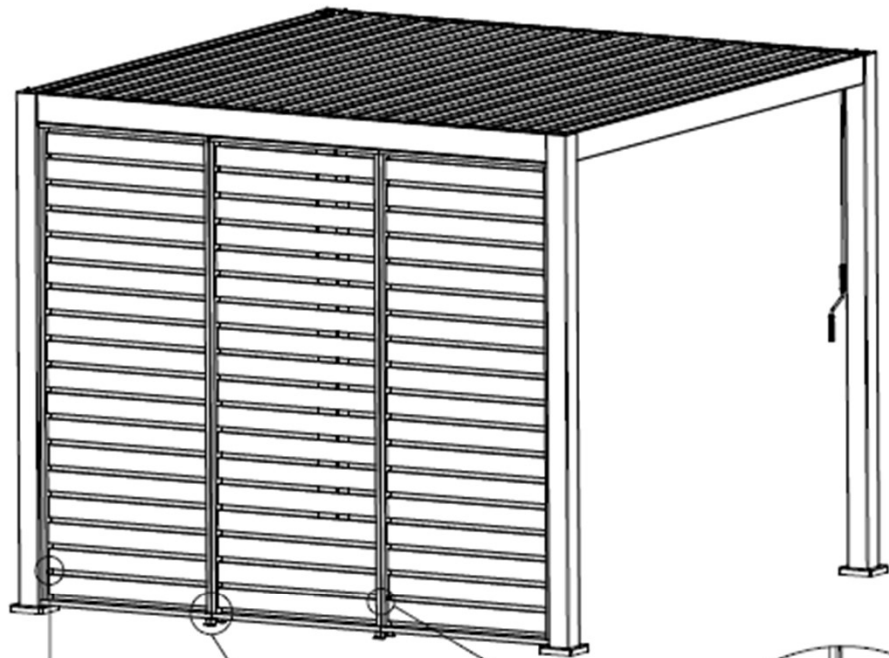

I

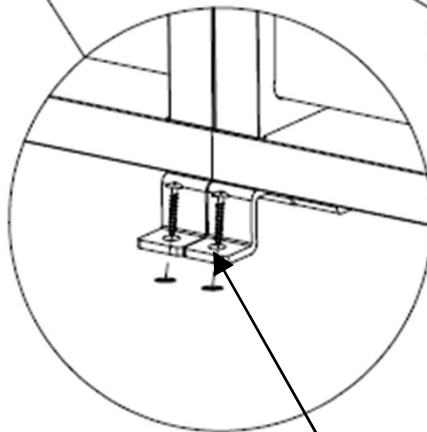

E

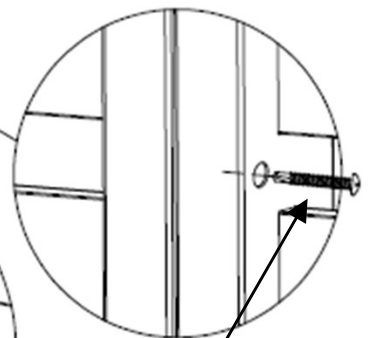

I